



Overview

<DR-201A>

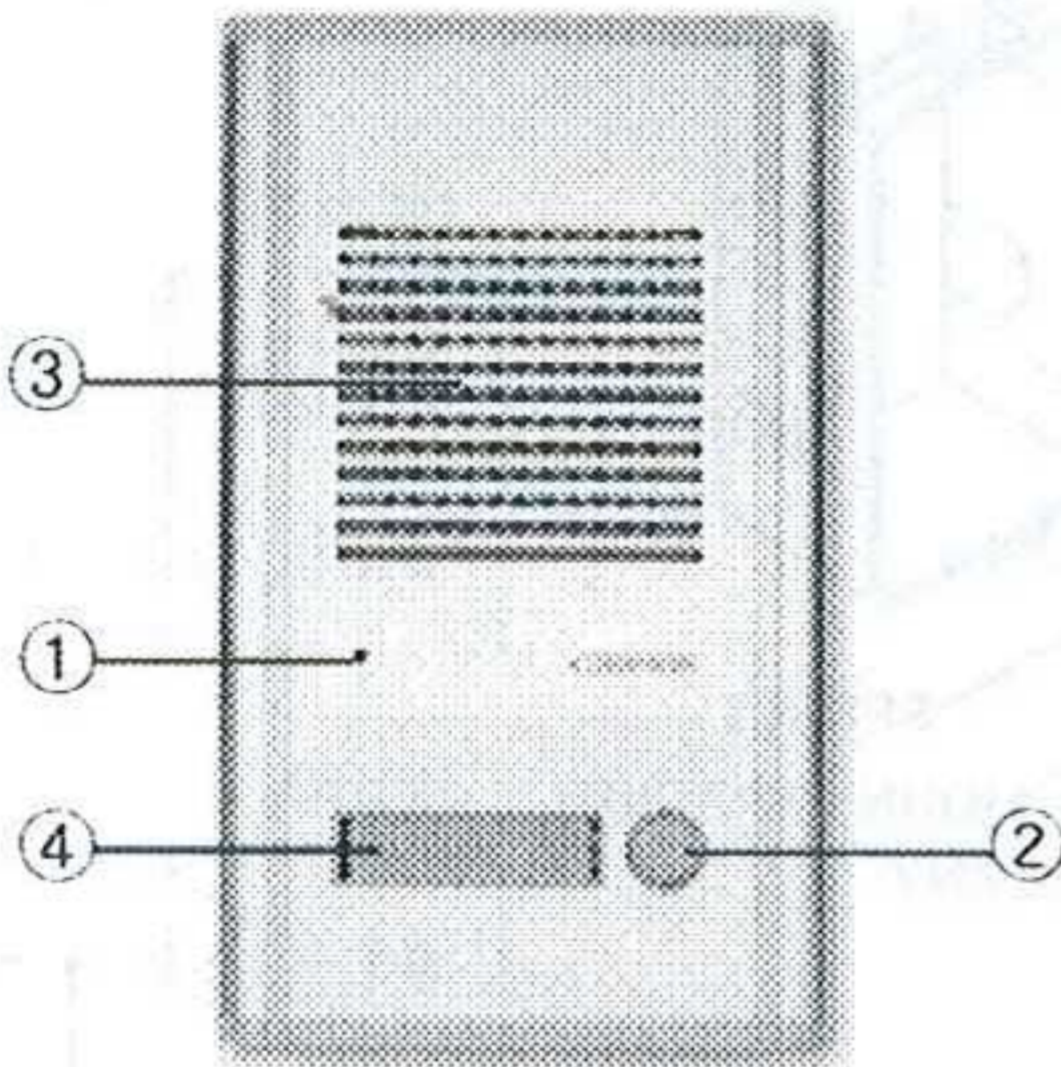


<DR-201AG>

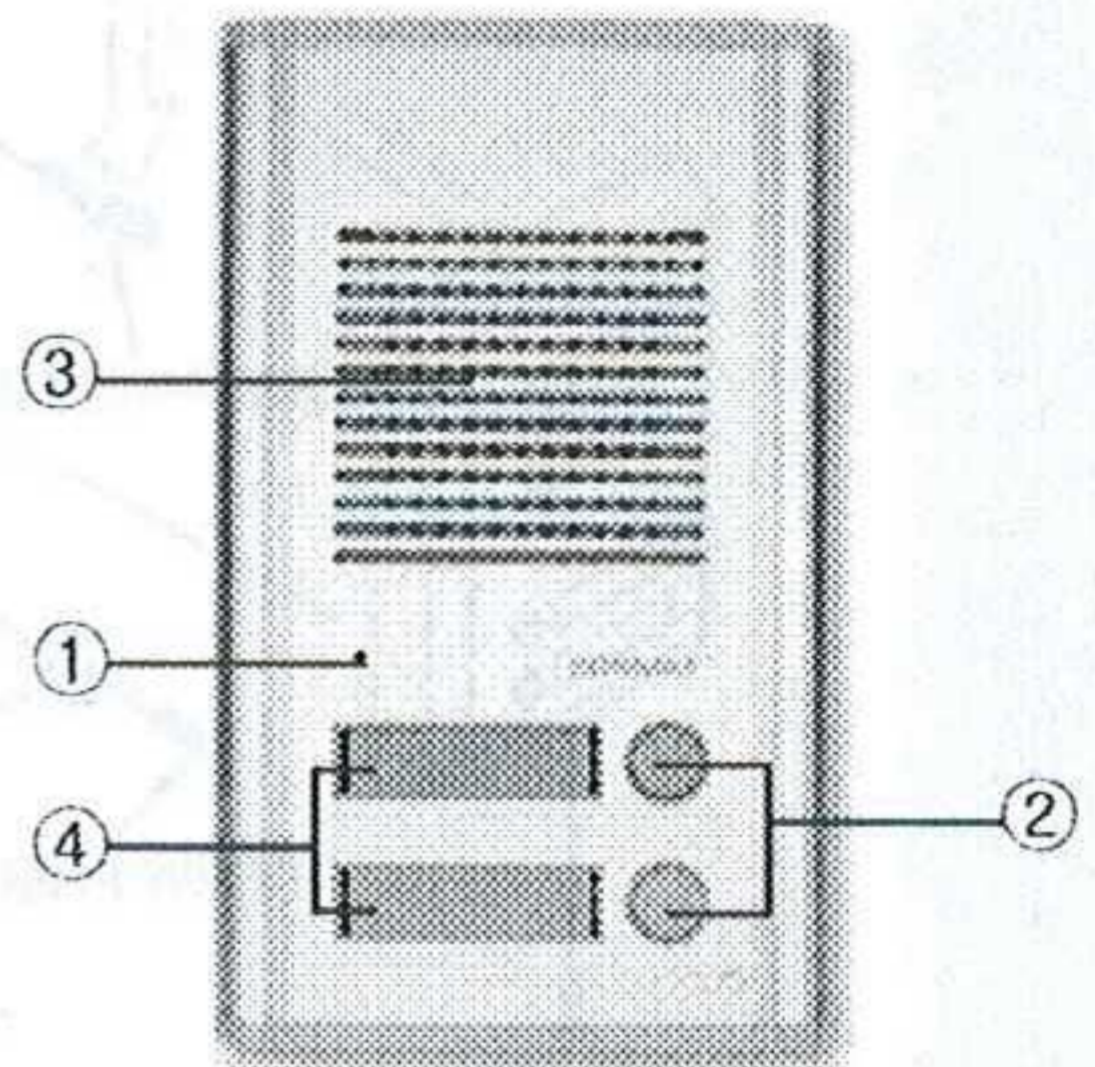


- ① Microphone : Transmits visitor's voice.(Outdoor Indoor)
- ② Call Button : Call to household.
- ③ Speaker : Transmits householder's voice.(Indoor Outdoor)
- ④ Name Tag : Name of each household.


Contents

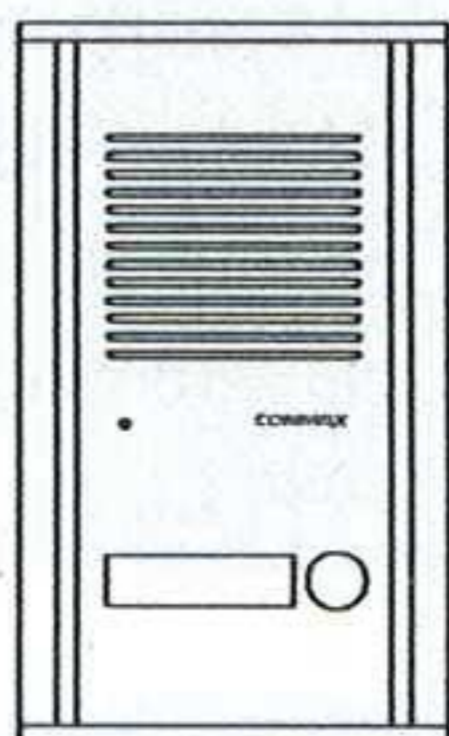

DR-201A

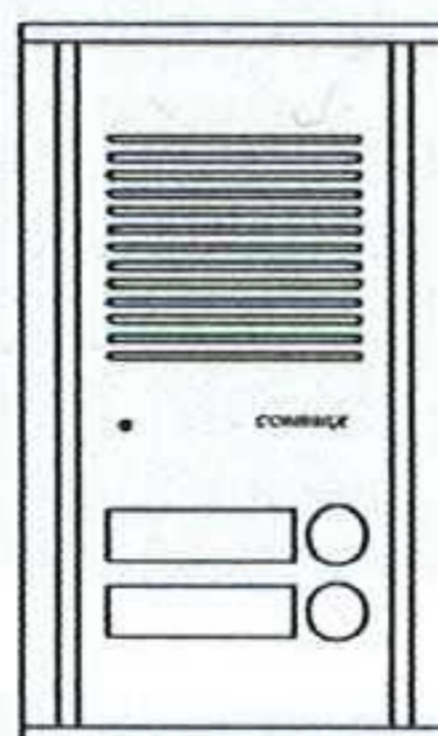


DR-201AG

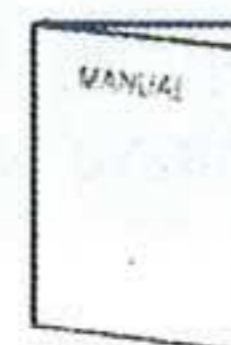

Manual

Wiring and Installation

1. Fix the hole of bracket with wall hole.
2. Connect Room station cables as appeared in the figure below.
3. Put the door unit inside of a back box as shown in the figure below.
4. Connect Door Release cable as appeared in the figure below.
5. Place the unit on the wall and mount with screws supplied.

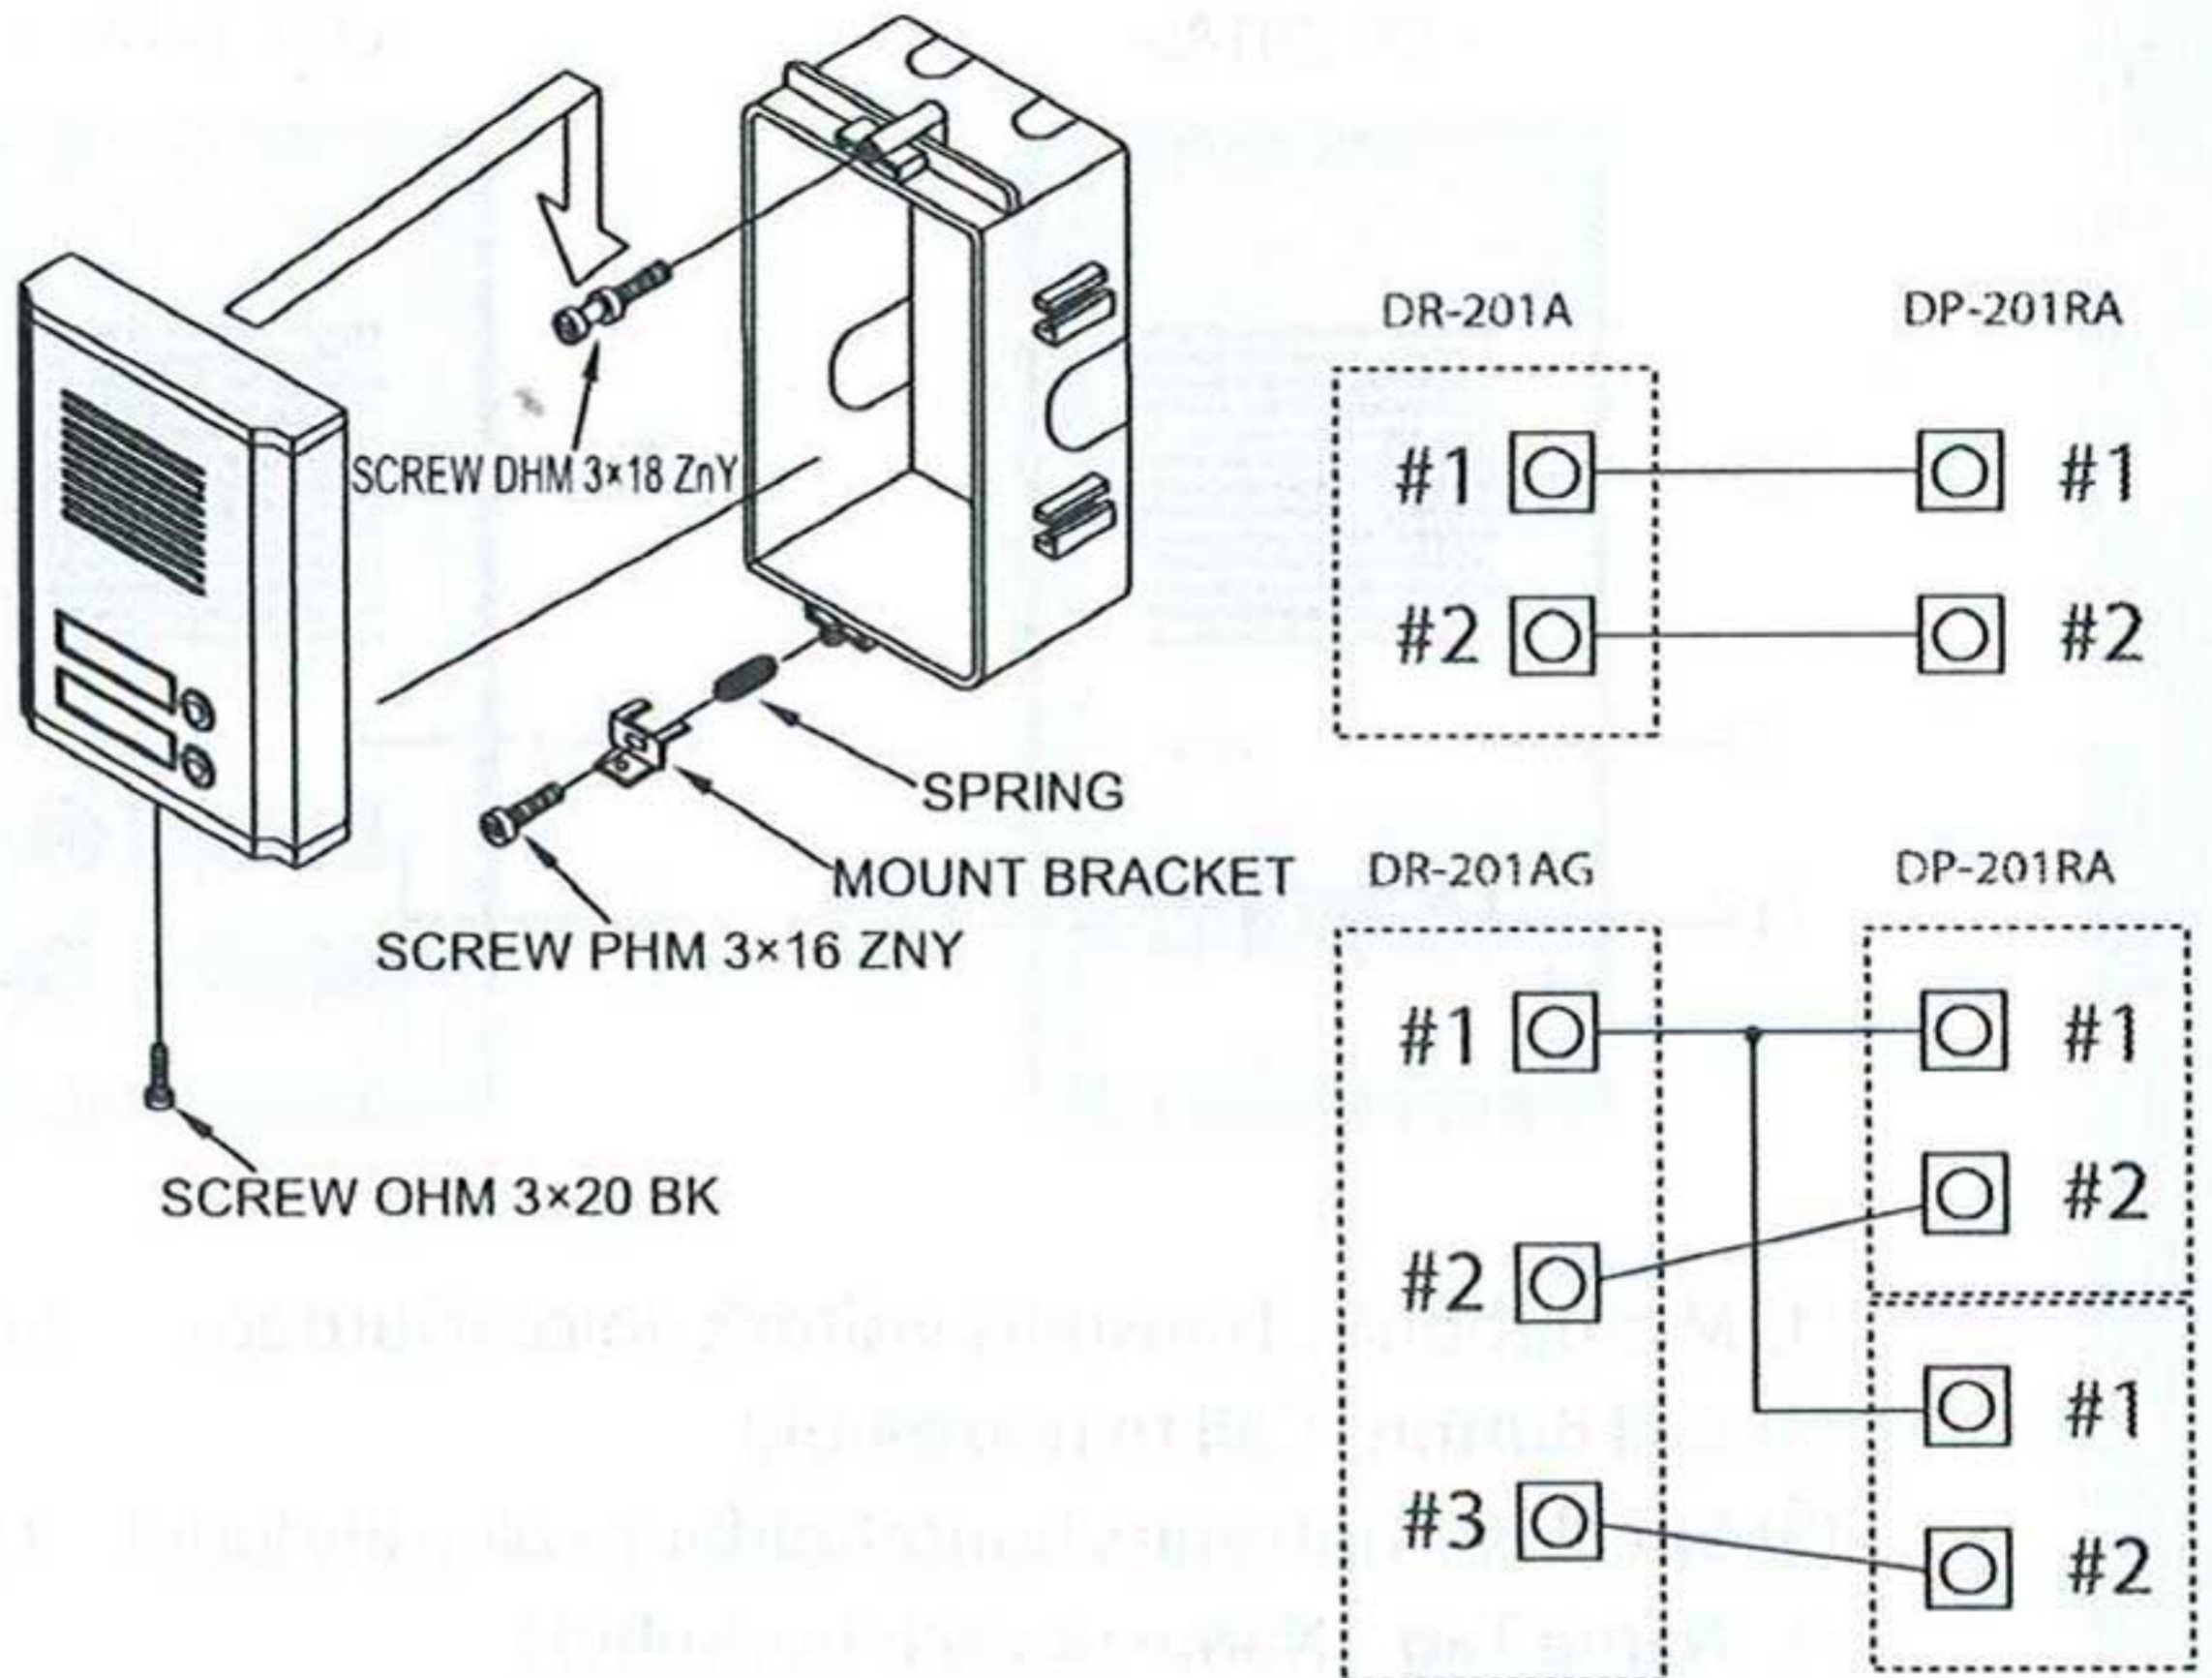

Specification

| | |
|---------------------------------|-------------------------|
| Model No. | DR-201A / 201AG |
| Rated voltage/Power consumption | Supplied from Room Unit |
| Wiring | Non polarity 2 wires |
| Installation | Flush mounted type |
| Dimension | 117 X 195 X 16mm |
| Operating Temp. | -10°C ~ +50°C |