

HELTUN™

IMPOSSIBLY SMART

RELAY SWITCH QUINTO

HE-RS01 USER MANUAL
v1.0



Table of Contents

Overview	3
Technical Specifications	3
Functions & Features	4
Installation	4
Disassembly.....	5
Operation	6
Scenarios	6
Factory Reset (RES)	6
Power and Energy Consumption.....	7
Z-Wave Network	7
Adding HE-RS01 to a Z-Wave network.....	7
Removing HE-RS01 from a Z-Wave network	7
Security	8
SmartStart	8
Firmware OTA Update	8
Associations	8
Gateway Compatibility Requirement	10
Z-Wave Plus v2 Specifications.....	10
HE-RS01 Settings Using Z-Wave Protocol (Gateway).....	11
Time Configuration	11
Sensor Configuration	11
Factory Default Parameters.....	14
Limited Warranty	16

Overview

This is the user manual for the HELTUN HE-RS01 Advanced Programmable Relay Switch 'Quinto' (i.e. five-channel). It is designed to fit inside standard round, square, or rectangular electrical junction boxes installed behind an existing in-wall switch or inside a circuit breaker panel. Relay Switch Quinto enables On/Off controls of lights, dimmers, blinds, doors, gates, valves, and motors either manually by a direct-connected switch, or remotely through a Z-Wave™ network.

Thanks to the HE-RS01 five-channel relays it can manage up to five On/Off devices, or three On/Off devices and one two-direction motors, or one On/Off device and two two-direction motors. It has two independent inputs for relay channels which allow it to control systems with different power sources or to use relay outputs as dry contacts. Each relay can be loaded up to five amps and uses the HELTUN Advanced Zero-Cross Technology to increase the life of the device and connected system.

The HE-RS01 can also be used to manage motorized systems, e.g. garage doors, window blinds, etc. It allows association with relay switches and roller shutters to control the opening and closing of the system.

The HE-RS01 has an onboard Real Time Clock (RTC) that enables scenarios where connected devices can be triggered on a schedule.

The HE-RS01 has five fully configurable inputs for external switches. Each input can be configured to control the relay output state (from one to five) in any of nine different modes. The inputs also can be used to activate scenes on a Z-Wave Controller.

The HE-RS01 integrates a Z-Wave Plus™ v2 700 platform module allowing it to be used with Z-Wave home automation systems. It supports Z-Wave 'S0' and 'S2' security protocols, SmartStart technology, and can be connected (i.e. "associated") with up to 15 other Z-Wave devices, such as relays, switches, dimmers, motor controllers, etc.

The HE-RS01 is also an excellent choice for managing lighting systems, allowing association to Z-Wave dimmers controlling both On and Off—as well as smooth brighten (Up) and smooth dim (Down)—states using external switches connected to HE-RS01 inputs.

Technical Specifications

- Dimensions: 50mm (H) x 50mm (W) x 27mm (D)
- Materials: Flame retardant plastic
- LED indicator for device status
- Five-channel relay outputs, resistive load up to 5A each
- Two independent relays inputs, dry contact
- Operating temperature: 0°C to 50°C
- Power supply: 85-265VAC 50Hz/60Hz, or 24-48VDC
- Power consumption: 1W
- Active elements: Electromagnetic Relay Switch
- Relay switching with HELTUN Advanced Zero-Cross Technology
- Relay life: 100.000 switches
- Device control
 - Through Z-Wave network
 - Directly with pilot wires
- IP class: IP21
- Z-Wave Plus V2 SDK: V7.11
- Z-Wave module: ZGM130S
- Requires mounting to flush electrical junction box:
round, square, or rectangular type – min. depth 40mm

Functions & Features

- Options for Inclusion/Exclusion to/from Z-Wave network
 - Non-Secure
 - S0 Secure
 - S2 Unauthorized, S2 Authorized with Key
- Association control of 15 devices from the network
- Schedule mode
- Motorized device control (i.e. roller shutter mode)
- Each of five external inputs can control any relay output
- Up to five different relay channels can be controlled by one external input
- Each external input can be set up to control devices from associated groups
- Each external input & relay output can be managed by a gateway or associated device
- Each external input can trigger scenes (i.e. acts like scene controller)
- Any relay channel may be excluded from control
- Nine modes available for each relay:
 1. Switch-ON
 2. Switch-OFF
 3. Timer: ON>OFF
 4. Timer Reversed: OFF>ON
 5. Inverse
 6. Two-Relay Inverse
 7. Momentary
 8. Momentary Reversed
 9. Roller Shutter
- Adjustable periodic measurements from:
 - Energy consumption meter
- Software energy consumption logic
- Factory reset function
- SmartStart technology for quick addition to Z-Wave networks
- OTA (Over The Air) encrypted firmware update

Installation

HELTUN recommends the HE-RS01 relay switch be installed by a licensed electrician in a manner that conforms to local regulations and building codes. Provide these instructions to the licensed electrician who is installing the HE-RS01.

WARNING: Electrical power must be switched off during installation.

1. FIRST ENSURE THE POWER IS OFF at the main circuit breaker (Fig. 1), and then test the wires with a probe or multimeter to verify.
2. Insert power wires into the HE-RS01 "POWER" terminals by inserting a small Phillips-head screwdriver in the slot beneath each terminal and unscrew to open. Follow *Fig. 2: Connection Diagram* and instructions below:
 - **Power wires:** for AC power (85-265VAC) connect Line & Neutral lead wires to L & N terminals labeled "POWER". For DC power (24-48VDC) connect "+" wire to terminal L and "-" wire to terminal N.
 - **Source 1 wire:** connect the required power source for relays 1, 2, and 3 to the terminal labeled "IN 1-3".
 - **Source 2 wire:** connect the required power source for relays 4 and 5 to the terminal labeled "IN 4-5".
 - **Loads:** connect the required loads to the relay output terminals labeled "OUT-1", "OUT-2", "OUT-3", "OUT-4", "OUT-5".

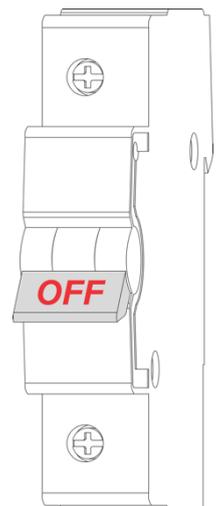


Figure 1:
Circuit Breaker

Note: HELTUN recommends installing cord terminals (electric wire ferrules) on the ends of wires before connecting them to the HE-RS01 outputs (various colors terminals are included).

Note: Zero-Cross technology is unavailable if the device uses DC voltage (24-48VDC).

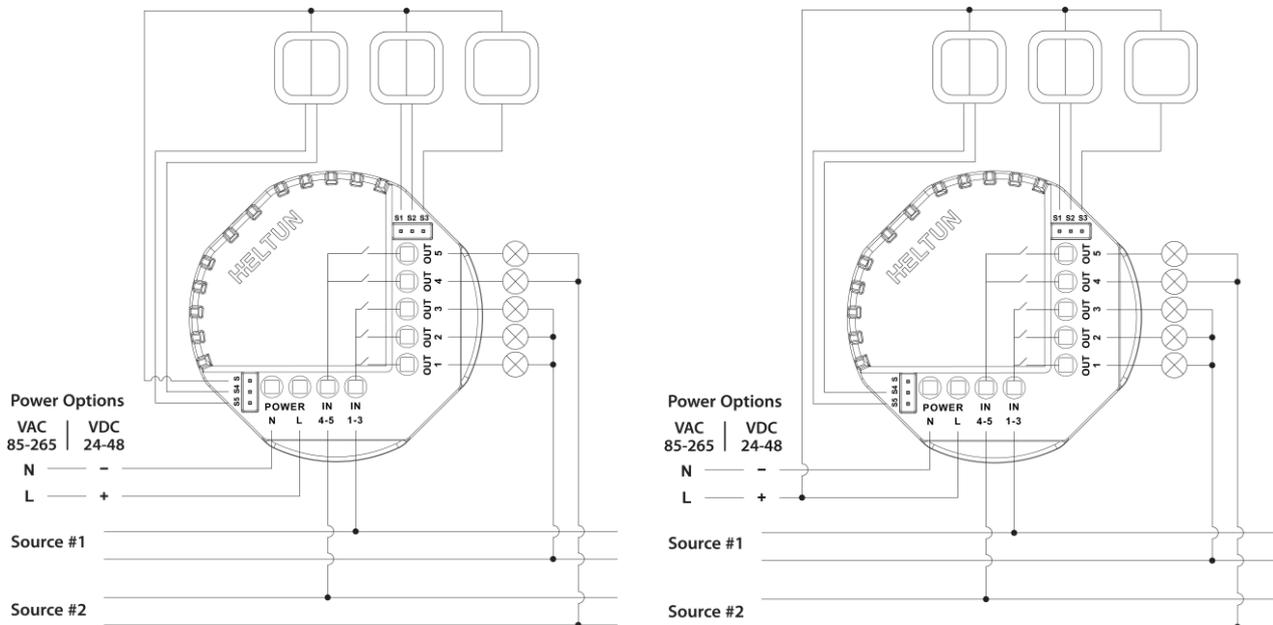


Figure 2: Power, Loads & External Switches Connection Diagram

- Next, connect terminals S1, S2, S3, S4, S5 to external control keys (switches) following Fig. 2 left diagram or Fig. 2 right diagram.

Note: In case of using Figure 2 right diagram, it is MANDATORY to connect external switches to the same wire connected to terminal L on the device.

- Switch on the main power at the circuit breaker. The HE-RS01 will start up with original default factory settings and the LED indicator will blink red slowly meaning the device is excluded from a Z-Wave network.

Disassembly

- ENSURE POWER IS SWITCHED OFF at the main circuit breaker AND THE LED INDICATOR IS OFF.
- Disconnect the wires by inserting a small Phillips-head screwdriver into the slot beneath each wire, then unscrew to release.

Operation

The HE-RS01 has five relays and five external inputs (S1, S2, S3, S4, S5).

1. Each relay can be controlled by any external input or via a Z-Wave network (using a Z-Wave gateway).
2. Each external input can be configured to control any relay output state (from one to five) in the modes below:
 - 1) **SWITCH-ON:** Press button on external switch: relay output switches to ON state (i.e. contacts are closed).
 - 2) **SWITCH-OFF:** Press button on external switch: relay output switches to OFF state (i.e. contacts are opened).
 - 3) **TIMER: ON>OFF:** Press button on external switch: relay output switches to ON for the specified time, then reverts to OFF. (Tip: This function is useful to open/close garage doors, blinds, curtains, etc.)
 - 4) **TIMER REVERSED: OFF>ON:** Press button on external switch: relay output switches to OFF for the specified time then reverts to ON. (Tip: This function is useful for switching off security systems for a short time.)

Note: Time can be configured from 0 to 12 hours (0 to 43200 seconds).
 - 5) **INVERSE STATE:** Press button on external switch: relay output inverts state: (ON to OFF) or (OFF to ON).
 - 6) **TWO-RELAY INVERSE:** When two relays are in Inverse mode, after pressing a button on external switch the corresponding relay (connected to that button) inverts its state: (from ON to OFF, or from OFF to ON) and the second relay will be switched OFF.

Note: In this mode both relays cannot be switched ON simultaneously. Can be used for motor direction control.
 - 7) **MOMENTARY** (factory default mode): When the button on an external switch is held, the relay output turns ON. As soon as the button is released, the relay output state changes to OFF.
 - 8) **MOMENTARY REVERSED:** When the button on an external switch is held, the relay output turns OFF. As soon as the button is released, the relay output state changes to ON.
 - 9) **ROLLER SHUTTER:** When two relays are connected to the same external switch, they will operate in 'roller shutter' mode. After entering this mode, relays will switch to OFF state, and never switch ON simultaneously. The four-cycle relay behavior is as follows (in this order):
 - 1st press: first relay will be switched ON, second relay will be switched OFF
 - 2nd press: both relays will be switched OFF
 - 3rd press: second relay will be switched ON, first relay will be switched OFF
 - 4th press: both relays will be switched OFFThe above-mentioned two relays are defined according to parameters 40 & 41 (e.g. if "54" is set as the parameter value, it means the fifth relay and fourth relay will be operated in inverse mode).

Note: This can be used to control motor directions with one button only.

Switches connected to external inputs (terminals S1-S5) can also be used to run scenarios or change modes in the connected gateway or associated devices.

If the HE-RS01 is associated with a Z-Wave gateway, the scene controller and five binary switches will appear. The scene controller indicates which external input was pressed, held, or released and allows the running of scenes on the Z-Wave gateway. The five binary switches allow the relay outputs to be managed.

Scenarios

Scenarios can be created that allow connected devices to be triggered by the HE-RS01 onboard Real Time Clock (RTC). The user should configure the output number, state, time, state change condition, in the Parameters (from 42 - 51) which will trigger the scenes.

Factory Reset (RES)

To reset the HE-RS01 to factory defaults, press and hold the button for six seconds. If successful, the LED indicator will blink white slowly for two seconds, then the device will reboot.

NOTE: This factory reset procedure will change all parameters to the original factory default values and will also exclude the device from any associated Z-Wave network.

Please use this procedure only when the network primary controller is missing or otherwise inoperable.

Power and Energy Consumption

The HE-RS01 monitors all connected loads active (i.e. 'real time') power, and total energy consumption, through software energy consumption logic. This data is periodically reported to the main Z-Wave controller according to Parameter 05.

Total Energy Consumption is the electrical power being used by connected device in real time during use. Power usage is calculated by the software using the values that were manually set when configuring Parameters 52-56, multiplied by the time tracked when the HE-RS01 corresponding output was in an ON state. Using your connected device's power consumption specification (see associated owner's manual), set the load in Watts for: "OUT-1" in Parameters 52, "OUT-2" in Parameter 53, "OUT-3" in Parameter 54, "OUT-4" in the Parameter 55, and "OUT-5" in Parameter 56.

Resetting Cumulative Consumption Memory:

The HE-RS01 enables you to erase stored consumption data through the Z-Wave network as follows:

1. Make sure the HE-RS01 is powered.
2. If not already done so, include the device into Z-Wave Gateway network
3. Reset memory consumption data using the Reset Command in COMMAND_CLASS_METER (see the Gateway owner's manual).

Note: Power cycling the HE-RS01 (On>Off>On) will not erase the consumption data as it is stored in non-volatile memory.

Z-Wave Network

The HE-RS01 may be operated in any Z-Wave network with other Z-Wave-certified devices from other manufacturers. The HELTUN HE-RS01 will act as a 'repeater' (i.e. 'range extender') for other devices regardless of manufacturer or brand to increase the reliability of the overall network.

Adding HE-RS01 to a Z-Wave network

To add the HE-RS01 to a Z-Wave Network (i.e. "inclusion"), do the following:

1. Ensure the HE-RS01 is Powered On and the LED indicator blinks red slowly (i.e. it is excluded)
2. Start the inclusion mode from the gateway / controller
3. To start the inclusion process on the HE-RS01, double-press the service button on the device (with no more than a one-second interval between presses).
4. The LED indicator will blink green quickly.
5. If the inclusion has been successful, the LED indicator will turn green for three seconds then continue slowly blinking green continuously while the HE-RS01 is Powered On.
6. If the inclusion was not successful, the LED indicator will turn red for three seconds then continue slowly blinking red continuously while Powered On. In that case repeat the inclusion process (2-5) above.

Removing HE-RS01 from a Z-Wave network

To remove the HE-RS01 from a Z-Wave Network (i.e. "exclusion"), do the following:

1. Ensure the HE-RS01 is Powered On and the LED indicator is slowly blinking green (i.e. it is included in a Z-Wave network).
2. Start the exclusion mode from the gateway/controller.
3. To start the exclusion process on the HE-RS01, double-press the service button on the device (with no more than a one-second interval between presses).
4. The LED indicator will blink red quickly.
5. If the inclusion has been successful, the LED indicator will turn red for three seconds then continue blinking red slowly continuously while the HE-RS01 is Powered On.
6. If the inclusion was not successful, the LED indicator will turn green for three seconds then continue slow blink green all the time the device is Powered On. In that case repeat the exclusion process (2-5) above.

Note: If the HE-RS01 has previously been part of a Z-Wave network and has not been excluded since (the LED indicator will blink green slowly). Inclusion is not possible without first performing an Exclusion or Factory Reset procedure.

Security

S0, S2 unauthorized, and S2 authorized Inclusion Modes are supported. If you use the S2 authorized Inclusion mode, the 'security key' (DSK provided on the HE-RS01 Security Card and printed on the device) should be used during the inclusion process.

Note: Be sure to save this key. Without the key, it is impossible to perform an inclusion in S2 authorized mode.

SmartStart

SmartStart-enabled products can be added to a Z-Wave network by scanning the Z-Wave QR Code shown on the product (see Fig. 3) with gateways/controllers that allow for SmartStart inclusion. In this case, no further action will be required and the SmartStart product will be added automatically within ten minutes of being turned on in the vicinity of a network.

To add the HE-RS01 to a Z-Wave network using **SmartStart**:

1. Input the HE-RS01 DSK code to the controller's Node Provisioning List (check your controller manual)
2. Power on the device.
3. Wait for the inclusion process to complete.
4. A successful "Add" will be confirmed by a message on the Z-Wave controller (depending on the controller type) and the LED indicator on HE-RS01 will turn green for three seconds then continue to slowly blink green continuously while the device is Powered On.

Note: The device QR code and DSK are printed on the front and rear of the HE-RS01 plus on the additional Security Card included in the packaging.



Figure 3: SmartStart QR Code & DSK

Firmware OTA Update

To wirelessly update the HE-RS01 firmware, follow these steps:

1. Check the HE-RS01 current firmware version in the gateway/controller.
2. Start the process from the Z-Wave gateway/controller.
3. Download the latest firmware that corresponds to the HE-RS01 (see <https://support.heltun.com/>)
4. Set main controller to Firmware OTA ("over-the-air") Update Mode (see the gateway/controller manual).
5. As soon as Firmware update begins, the LED will sequentially blink red→green→blue (this will take a few minutes).
6. When Firmware has updated, LED will turn orange for two seconds and then the HE-RS01 will reboot.
7. When the update has been completed, the HE-RS01 will return to normal operation.
8. Verify the update was successful by checking firmware version from the gateway/controller.

Associations

Association enables the HE-RS01 to control up to 15 other Z-Wave devices over the network. The HE-RS01 has 6 Endpoints and 16 Association Groups. Each Association Group (except group 1) may include one other device from different brands and/or manufacturers.

EndPoint 0 Groups:

The Root Device (EndPoint 0) of HE-RS01 has 16 association groups

Group 1 – "Lifeline": reports state of the device and is used to communicate with the Z-Wave gateway. This group supports one Node.

Note: It is not recommended to modify this group.

Group 2 – "External Input S1 Basic Set": is assigned to Input S1 state and will be triggered when the button on switch connected to S1 input was pressed. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

Group 3 – "External Input S1 Multilevel Set": is assigned to Input S1. It sends MULTILEVEL SWITCH command class frame when the button on switch connected to S1 input was held. Is used to send UP/DOWN command to the associated devices. The group supports one Node.

Group 4 – "External Input S2 Basic Set": is assigned to Input S2 state and will be triggered when the button on switch connected to S2 input was pressed. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

Group 5 – “External Input S2 Multilevel Set”: is assigned to Input S2. It sends MULTILEVEL SWITCH command class frame when the button on switch connected to S2 input was held. Is used to send UP/DOWN command to the associated devices. The group supports one Node.

Group 6 – “External Input S3 Basic Set”: is assigned to Input S3 state and will be triggered when the button on switch connected to S3 input was pressed. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

Group 7 – “External Input S3 Multilevel Set”: is assigned to Input S3. It sends MULTILEVEL SWITCH command class frame when the button on switch connected to S3 input was held. Is used to send UP/DOWN command to the associated devices. The group supports one Node.

Group 8 – “External Input S4 Basic Set”: is assigned to Input S4 state and will be triggered when the button on switch connected to S4 input was pressed. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

Group 9 – “External Input S4 Multilevel Set”: is assigned to Input S4. It sends MULTILEVEL SWITCH command class frame when the button on switch connected to S4 input was held. Is used to send UP/DOWN command to the associated devices. The group supports one Node.

Group 10 – “External Input S5 Basic Set”: is assigned to Input S5 state and will be triggered when the button on switch connected to S5 input was pressed. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

Group 11 – “External Input S5 Multilevel Set”: is assigned to Input S5. It sends MULTILEVEL SWITCH command class frame when the button on switch connected to S5 input was held. Is used to send UP/DOWN command to the associated devices. The group supports one Node.

Group 12 – “Relay 1 Basic Set”: is assigned to relay N1 and will be triggered on the relay state change. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

Group 13 – “Relay 2 Basic Set”: is assigned to relay N2 and will be triggered on the relay state change. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

Group 14 – “Relay 3 Basic Set”: is assigned to relay N3 and will be triggered on the relay state change. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

Group 15 – “Relay 4 Basic Set”: is assigned to relay N4 and will be triggered on the relay state change. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

Group 16 – “Relay 5 Basic Set”: is assigned to relay N5 and will be triggered on the relay state change. Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node.

EndPoints 1-5 Groups:

Group 1 – “Lifeline”: reports state of the device and used to communicate with the Z-Wave gateway. The group supports one Node.

Note: It is not recommended to modify this group.

Group 2 – “Basic Set”: Is used to send Basic Set ON (value 255) and Basic Set OFF (value 0) commands to the associated devices. The group supports one Node and it is mapped to EndPoint 0 groups.

Here is a truth table for EndPoints 1-5 groups mapping to the root device (EndPoint 0) groups:

EndPoints 1-10 groups	Root (EndPoint 0) groups
Endpoint 1, Group 2 – “Relay 1 Basic Set”	Group 12 – “Relay 1 Basic Set”
Endpoint 2, Group 2 – “Relay 2 Basic Set”	Group 13 – “Relay 2 Basic Set”
Endpoint 3, Group 2 – “Relay 3 Basic Set”	Group 14 – “Relay 3 Basic Set”
Endpoint 4, Group 2 – “Relay 4 Basic Set”	Group 15 – “Relay 4 Basic Set”
Endpoint 5, Group 2 – “Relay 5 Basic Set”	Group 16 – “Relay 5 Basic Set”

Gateway Compatibility Requirement

In order to make a reliable connection and data exchange with the gateway make sure that the gateway/controller is multi-channel capable. The gateway/controller lifeline association should be configured as a “multi-channel association.” Some gateways need this option to be manually configured.

Note: Fibaro Home Center 2: In order to enable correct communications between a Fibaro gateway/controller and the HE-RS01, the lifeline association should be configured as a “multi-channel association.” Make sure that only the Multi-channel association check box is selected under Device > Settings > Advanced > Setting Association > Group1 tab (lifeline).

Note: By default, there are two checkboxes for Single-channel and Multi-channel associations. Please deselect the checkbox under Single-channel associations.

Z-Wave Plus v2 Specifications

Generic Device Class: GENERIC_TYPE_WALL_CONTROLLER

Specific Device Class: SPECIFIC_TYPE_NOT_USED

Supported Command Classes

Command Class	Version	Required Security Class
Z-Wave Plus Info	V2	none
Association	V2	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Association Group Info	V3	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Multi Channel Association	V3	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Multi Channel	V4	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Switch Binary	V2	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Central Scene	V3	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Meter	V5	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Clock	V1	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Transport Service	V2	none
Security 0	V1	none
Security 2	V1	none
Version	V3	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Manufacturer Specific	V2	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Device Reset Locally	V1	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Powerlevel	V1	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Supervision	V1	none
Indicator	V3	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Configuration	V4	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Application Status	V1	none
Firmware Update Meta Data	V5	highest granted (S2 Authenticated, S2 Unauthenticated or S0)
Basic	V2	highest granted (S2 Authenticated, S2 Unauthenticated or S0)

Meter Command Class:

Meter Type	Scale	Rate Type	Precision	Size
Electric [0x01]	Electric_kWh [0x00]	Import [0x01]	2	4
Electric [0x01]	Electric_W [0x02]	Import [0x01]	0	2

HE-RS01 Settings Using Z-Wave Protocol (Gateway)

All configuration parameters are accessed through COMMAND_CLASS_CONFIGURATION

Time Configuration

Parameter 01 – Time correction by controller

If this Parameter value = 1 and the HE-RS01 is connected to a Z-Wave gateway, the HE-RS01 time and day will be periodically polled and corrected from the gateway. To switch off time auto-correction set the Parameter value to 0. The factory default value is 1.

Note. When auto-correction is turned off, the gateway will set the time once during the device inclusion to the Z-Wave network time.

Parameter 02 – Week Day

This parameter allows manual adjustment of the day of the week in case the HE-RS01 is not connected to any Z-Wave gateway, or Parameter 01 (auto-correction) is selected as 0. The factory-default value is 1. 1=Monday, 2=Tuesday, 3=Wednesday, 4=Thursday, 5=Friday, 6=Saturday, 7=Sunday.

Parameter 03 – Hour

This Parameter allows manual adjustment of **Time: Hours** in case the HE-RS01 is not connected to any Z-Wave gateway, or Parameter 01 (auto-correction) is selected as 0. The factory-default value is 00.

Parameter 04 – Minute

This Parameter allows manual adjustment of **Time: Minutes** in case the HE-RS01 is not connected to any Z-Wave gateway, or Parameter 01 (auto-correction) is selected as 0. The factory-default value is 00.

Sensor Configuration

Parameter 05 – Energy Consumption Meter Consecutive Report Interval

This Parameter defines the interval between consecutive reports of real time and cumulative energy consumption data to the gateway. The value can be adjusted from 1 min. to 120 mins. The factory default value is 10 minutes.

Note: If the sensor readings change, the device will send the report to the gateway regardless of this parameter value. In order to not increase traffic on your network, it is not recommended to reduce the value of this parameter.

Parameters 06-10 – External Input Number for Relays Output Control (correspondingly).

0 – Controlled by gateway or associated device

1 – Controlled by external input S1

2 – Controlled by external input S2

3 – Controlled by external input S3

4 – Controlled by external input S4

5 – Controlled by external input S5

Factory default value: Each relay corresponds to its external input (e.g. for Relay “3” the default value is external input “S3”)

Parameters 11-15 – Hold Control Mode for external inputs S1-S5 (correspondingly).

0 – Hold function is disabled

1 – Operate like click (Parameters 16-20)

2 – Momentary Switch: When the button on switch connected to external input is held, (key closed) the relay output state is ON, as soon as the button is released (key opened) the relay output state changes to OFF.

3 – Reversed Momentary Switch: When the button on switch connected to external input is held, the relay output state is OFF, as soon as the button is released the relay output state changes to ON.

Factory default value: 2

Parameters 16-20 – Click control mode for external inputs S1-S5 (correspondingly).

0 – Click function disabled

1 – Toggle switch: relay inverts state (ON to OFF, OFF to ON).

2 – Relay switches to ON state only

3 – Relay switches to OFF state only

4 – Timer: On>Off Mode: Relay output switches to ON state (contacts are closed) then after a specified time switches back to OFF state (contacts are open). The time is specified in parameters 21-25.

5 – Timer: OFF>ON Mode: Relay output switches to OFF state (contacts are open) then after a specified time switches back to ON state (contacts are closed). The time is specified in Parameters 21-25.

Factory default value: 1

Parameters 21-25 – Relay Timer mode duration

These parameters specify the duration in seconds for the Timer mode (value 4 or 5 in Parameters 16-20 respectively). Press the button on the switch connected to external input and the relay output goes to ON/OFF for the specified time then changes back to OFF/ON. This function can be used to open/close garage doors, blinds, curtains, etc. or to turn attached devices like security OFF for a short time. The time values can be configured from 0 sec to 43200 sec (12 hours).

Factory default value: “0”

Note: If the parameter value is set to “0” the relay output will operate as a short contact (duration is about 0.5 sec).

Parameters 26, 27 – Relay Inverse Mode

The values in this parameter will specify the relay numbers that will operate in inverse mode. For this purpose, the value will be encoded as a 2-digit number “AB” where “A” is the number of the first relay, and “B” is number of the second relay. For example, if the parameter value is “35” or “53” it means the relays N3 and N5 will operate in inverse mode. Relays can operate in an inverse mode in two different ways:

1. When the first and the second relays are connected to two different external switches. In this case, after pressing a button, the corresponding relay connected to that button will toggle its state (‘ON to OFF’ or ‘OFF to ON’), and the other relay will be switched OFF.

2. When two relays are connected to the same external switch. In this case, the relays will operate in roller shutter mode and their behavior will follow these four cycles:

- **1st press of button:** the first relay will be switched ON, the second relay will be switched OFF
- **2nd press of button:** both relays will be switched OFF
- **3rd press of button:** the second relay will be switched ON, the first relay will be switched OFF
- **4th press of button:** both relays will be switched OFF

Factory default value: “0”

Note: In this mode, both relays cannot be switched ON at the same time (i.e. simultaneously).

Note: Switching OFF one relay will always operate before switching ON another relay to prevent both relays from being ON at the same time.

Note: Two groups of inverse relays can be specified, one group in Parameter 35 another group in Parameter 36

Parameters 28-30

Reserved by manufacturer

Parameters 31-40 - Relays Control by Sensors

In these parameters, the relay state changes depending on day and time. For these configurations, parameter values are encoded as 8-digit numbers: (ABCDEFGH).

A = Relay number (1 through 5)

B = Day of week

0-every day

1-7-corresponding day

8-every weekday

9-every weekends,

C: State Change,

0-Switch OFF

1-Switch ON

DEFG: Condition Value

DE represents Hour (0 through 23),

FG represents Minutes (0 through 59).

All other numbers are reserved and will not affect the operation. To disable this option simply set this parameter to 0. The factory-default value: “0”

Example: Parameter value 1200350 means A=1 (relay 1 output), B=2 (Tuesday), C=0 (switch the relay Off), DEFG=0350 (time 03:50). In this case each Tuesday at 03:50 the relay 1 output will be switched Off.

Note: The relays still can be controlled manually using External Inputs S1-S5 according to Parameters 06-11 or via controller/gateway.

Note: The logic will implement the operation when the time crosses the value in the Parameter. Meaning, that if the logic Switches on the relay and you manually switch it Off, the relay will switch On next time when the value crosses the set parameter.

Parameters 41-45 – Relay Load Power in Watts.

You may specify load consumption (in Watts) for each relay channel (1 through 5) in order to calculate total energy consumption relative to the time each relay is ON.

The factory default-value: 0

Parameters 46-50 – Associations Mode

These parameters are intended for use when Multilevel Switch Group Associations (Groups 3, 5, 7, 9 & 11) have been activated. They define the logic of values changing if one of the buttons on switch connected to external inputs S1-S5 has been held for more than one second. They are useful options for controlling dimmers or roller shutter devices in the following three ways:

“0” – On each hold event, “UP (brighten)” and “DOWN (dim)” command will be alternately sent to associated devices.

“1” – On each hold event, the “UP (brighten)” command will be sent to associated devices.

“2” – On each hold event, the “DOWN (dim)” command will be sent to associated devices.

The factory-default value: 0

Parameter 51 – Frequency Region

The RS01 has Z-Wave 700 series chip inside which allows to use the device in different Z-Wave frequencies. If there is a need to use the device in the frequency different from the factory default change the value of this parameter according to the frequency list below.

Note: The factory default frequency differs depending on which region the device was intended for sale in. Check the factory default frequency on the device plate or on the packaging.

Note: Do not change this parameter value if there is no special need.

Note: The frequency change will be applied only after removing from Z-Wave network and automatic reboot of the device.

Note: The change of this parameter will result in inability to control the device, if the device was included to the controller/gateway which supports only one frequency,

Note: Resetting the device to factory default settings will revert the frequency to the factory default value.

Note: In most of countries it is not allowed to use the frequency different from the frequency intended for that country.

Frequency list for different regions:

0: EU (868.4 MHz, 869.85 MHz)	5: IL (916.0 MHz)
1: US (908.4 MHz, 916.0 MHz)	6: RU (869.0 MHz)
2: ANZ (919.8 MHz, 921.4 MHz)	7: CH (868.4 MHz)
3: HK (919.8 MHz)	8: JP (922.5 MHz, 923.9 MHz, 926.3 MHz)
4: IN (865.2 MHz)	9: KR (920.9 MHz, 921.7 MHz, 923.1 MHz)

The full list of Z-Wave global regions where Z-Wave works is available at [Z-Wave Global Regions](#) SiLabs page.

Parameter 52-56 – Output NO/NC Mode

The device can operate in Normal Open (NO) mode and in Normal Close (NC) mode. If the Parameter value = 0, the device switch operates in NO mode and there is no voltage on output when the device is in OFF state. The output will be powered when device goes to ON state. If the Parameter value = 1, the output will be powered in OFF state and will be no voltage on output when the device is in ON state.

The factory default value is 0 (NO mode).

Parameters 57-70 – Reserved by Manufacturer

These parameters are reserved for future updates and new functionality. Changing these parameters will not have any effect on the device.

Factory Default Parameters

Number	Size	Name	Description	Default Value	Available Values
01	1 byte	TIME CORRECTION	Time correction by controller	1	0, 1
02	1 byte	WEEKDAY	Week Day	1	1 = Monday, 2 = Tuesday, 3 = Wednesday, 4 = Thursday, 5 = Friday, 6 = Saturday, 7 = Sunday
03	1 byte	HOUR	Time Hour	0	0 to 23
04	1 byte	MINUTE	Time Minute	0	0 to 59
05	1 byte	METER REPORT INTERVAL	Energy Consumption Meter Consecutive Report Interval, minutes	10	1 to 120
06	1 byte	RELAY1 CONTROL SOURCE	Relay 1 control external source	1	0 – Controlled by gateway or associated device
07	1 byte	RELAY2 CONTROL SOURCE	Relay 2 control external source	2	1 – Controlled by External Input S1
08	1 byte	RELAY3 CONTROL SOURCE	Relay 3 control external source	3	2 – Controlled by External Input S2
09	1 byte	RELAY4 CONTROL SOURCE	Relay 4 control external source	4	3 – Controlled by External Input S3
10	1 byte	RELAY5 CONTROL SOURCE	Relay 5 control external source	5	4 – Controlled by External Input S4
11	1 byte	HOLD1 CONTROL MODE	Hold control mode for relay 1	2	5 – Controlled by External Input S5
12	1 byte	HOLD2 CONTROL MODE	Hold control mode for relay 2	2	0 – Hold function is disabled
13	1 byte	HOLD3 CONTROL MODE	Hold control mode for relay 3	2	1 – Operate like click
14	1 byte	HOLD4 CONTROL MODE	Hold control mode for relay 4	2	2 – Momentary switch
15	1 byte	HOLD5 CONTROL MODE	Hold control mode for relay 5	2	3 – Momentary switch reversed
16	1 byte	CLICK1 CONTROL MODE	Click control mode for relay 1	1	0 – Click function is disabled
17	1 byte	CLICK2 CONTROL MODE	Click control mode for relay 2	1	1 – Relay inverts the state
18	1 byte	CLICK3 CONTROL MODE	Click control mode for relay 3	1	2 – Relay switches ON only
19	1 byte	CLICK4 CONTROL MODE	Click control mode for relay 4	1	3 – Relay switches OFF only
20	1 byte	CLICK5 CONTROL MODE	Click control mode for relay 5	1	4 – Timer mode ON – OFF
21	2 bytes	RELAY1 TIMER DURATION	Timer mode duration for relay 1	0	5 – Timer mode OFF - ON
22	2 bytes	RELAY2 TIMER DURATION	Timer mode duration for relay 2	0	0 to 43200
23	2 bytes	RELAY3 TIMER DURATION	Timer mode duration for relay 3	0	0 to 43200
24	2 bytes	RELAY4 TIMER DURATION	Timer mode duration for relay 4	0	0 to 43200
25	2 bytes	RELAY5 TIMER DURATION	Timer mode duration for relay 5	0	0 to 43200
26	1 byte	RELAY INVERSE GROUP1	Group 1 relay inverse mode	0	0, 12, 13, 14, 15, 21, 23, 24, 25, 31, 32, 34, 35, 41, 42, 43, 45, 51, 52, 53, 54
27	1 byte	RELAY INVERSE GROUP2	Group 2 relay inverse mode	0	0, 12, 13, 14, 15, 21, 23, 24, 25, 31, 32, 34, 35, 41, 42, 43, 45, 51, 52, 53, 54
28-30	Reserved by the manufacturer				
31	4 bytes	RELAY CONTROL SCENARIO1	Relays control by day time Group 1	0	0, 10000000 to 5912359
32	4 bytes	RELAY CONTROL SCENARIO2	Relays control by day time Group 2	0	0, 10000000 to 5912359
33	4 bytes	RELAY CONTROL SCENARIO3	Relays control by day time Group 3	0	0, 10000000 to 5912359

34	4 bytes	RELAY CONTROL SCENARIO4	Relays control by day time Group 4	0	0, 10000000 to 5912359
35	4 bytes	RELAY CONTROL SCENARIO5	Relays control by day time Group 5	0	0, 10000000 to 5912359
36	4 bytes	RELAY CONTROL SCENARIO6	Relays control by day time Group 6	0	0, 10000000 to 5912359
37	4 bytes	RELAY CONTROL SCENARIO7	Relays control by day time Group 7	0	0, 10000000 to 5912359
38	4 bytes	RELAY CONTROL SCENARIO8	Relays control by day time Group 8	0	0, 10000000 to 5912359
39	4 bytes	RELAY CONTROL SCENARIO9	Relays control by day time Group 9	0	0, 10000000 to 5912359
40	4 bytes	RELAY CONTROL SCENARIO10	Relays control by day time Group 10	0	0, 10000000 to 5912359
41	2 bytes	RELAY1 LOAD POWER	Power of the Relay 1 load in Watts	0	0 to 1100
42	2 bytes	RELAY2 LOAD POWER	Power of the Relay 2 load in Watts	0	0 to 1100
43	2 bytes	RELAY3 LOAD POWER	Power of the Relay 3 load in Watts	0	0 to 1100
44	2 bytes	RELAY4 LOAD POWER	Power of the Relay 4 load in Watts	0	0 to 1100
45	2 bytes	RELAY5 LOAD POWER	Power of the Relay 5 load in Watts	0	0 to 1100
46	1 byte	S1 ASSOCIATION MODE	Associations mode for external input S1	0	0 – On each hold event, “UP (brighten)” and “DOWN (dim)” command will be alternately sent to associated devices. 1 – On each hold event, the “UP (brighten)” command will be sent to associated devices. 2 – On each hold event, the “DOWN (dim)” command will be sent to associated devices.
47	1 byte	S2 ASSOCIATION MODE	Associations mode for external input S2	0	
48	1 byte	S3 ASSOCIATION MODE	Associations mode for external input S3	0	
49	1 byte	S4 ASSOCIATION MODE	Associations mode for external input S4	0	
50	1 byte	S5 ASSOCIATION MODE	Associations mode for external input S5	0	
51	1 byte	FREQUENCY REGION	Frequency region	0	0..9
52	1 byte	RELAY1 OUTPUT MODE	Relay1 output NO/NC mode	0	0, 1
53	1 byte	RELAY2 OUTPUT MODE	Relay2 output NO/NC mode	0	0, 1
54	1 byte	RELAY3 OUTPUT MODE	Relay3 output NO/NC mode	0	0, 1
55	1 byte	RELAY4 OUTPUT MODE	Relay4 output NO/NC mode	0	0, 1
56	1 byte	RELAY5 OUTPUT MODE	Relay5 output NO/NC mode	0	0, 1
57-70	Reserved by the manufacturer				

Limited Warranty

HELTUN warrants this product to be free from defects in workmanship or materials, under normal use and service, for a period of one (1) year from the date of purchase by the consumer ("Warranty Period"). HELTUN will extend this Warranty Period to two (2) years from the date of consumer purchase for any consumer who registers their warranty with HELTUN at this website page: <http://bonus.heltun.com/>. This Limited Warranty applies only to the first end-user of the product and is not transferable.

If during the Warranty Period the product is determined to be defective or malfunctions due to workmanship or materials, HELTUN, at HELTUN's option, shall either repair or replace the defective product. If the product is defective, (i) return it with dated proof of purchase to the place it was purchased; or (ii) contact HELTUN Customer Care by email at support@heltun.com. HELTUN Customer Care will make the determination whether the product should be returned or whether a replacement product will be sent to you.

EXCEPT AS MAY BE OTHERWISE PROVIDED BY APPLICABLE LAW, THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER COVENANTS AND WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. HELTUN MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED.

THIS LIMITED WARRANTY DOES NOT COVER REMOVAL OR REINSTALLATION COSTS. THIS LIMITED WARRANTY SHALL NOT APPLY IF IT IS SHOWN BY HELTUN THAT THE DEFECT OR MALFUNCTION WAS CAUSED BY DAMAGE DONE BY A CONSUMER INCLUDING DURING INSTALLATION. THIS LIMITED WARRANTY IS VOID IF DEFECT(S) RESULT FROM A FAILURE TO HAVE THIS PRODUCT INSTALLED PROPERLY.

HELTUN'S SOLE RESPONSIBILITY AND THE CONSUMER'S SOLE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE TO REPAIR OR REPLACE THE PRODUCT WITHIN THE TERMS STATED ABOVE. HELTUN SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. IN NO EVENT SHALL HELTUN'S LIABILITY EXCEED THE AMOUNT ACTUALLY PAID FOR THE PRODUCT WHETHER SUCH LIABILITY ARISES FROM A CLAIM BASED ON WARRANTY, TORT, OR CONTRACT. THESE LIMITATIONS ON LIABILITY SHALL REMAIN IN EFFECT EVEN IF HELTUN WAS ADVISED OF THE POSSIBILITY OF SUCH INJURIES, LOSSES, OR DAMAGES.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY HELTUN MAKES ON THIS PRODUCT.

If you have any questions concerning this limited warranty, please write HELTUN Customer Care at support@heltun.com.

HELTUN, INC. | A USA DELAWARE CORPORATION
2/5 ARMENAKYAN STR., YEREVAN, 0047, ARMENIA
WWW.HELTUN.COM | SUPPORT@HELTUN.COM